


ENGLISH

SPRAYIT

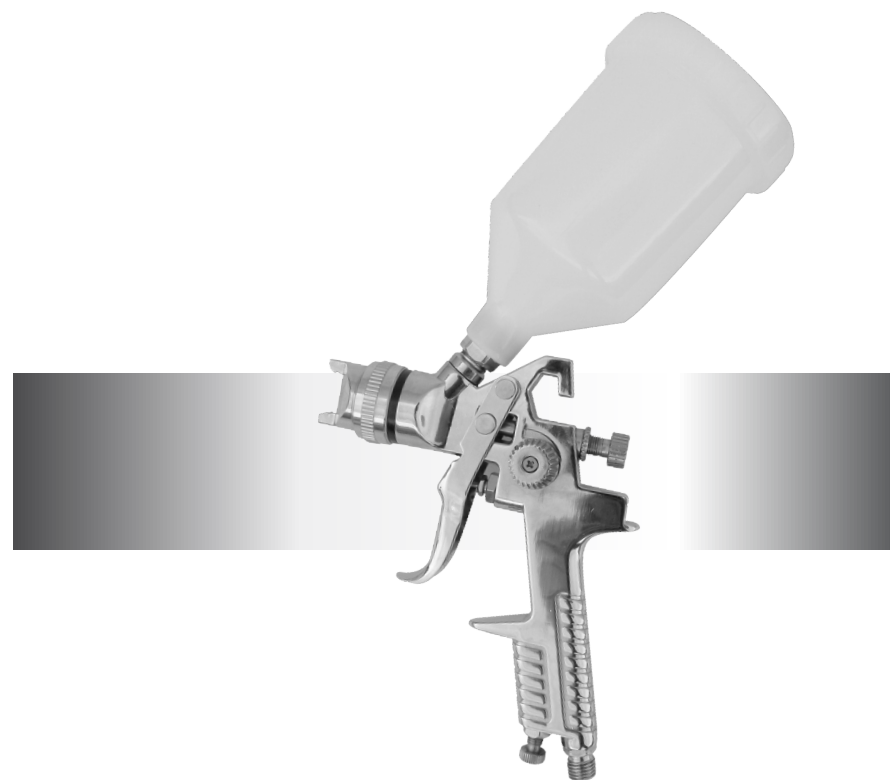


SPRAYIT SP351

GRAVITY FEED SPRAY GUN

**PISTOLA DE GRAVEDAD
3 REGULADORES VASO DE
PLASTICO**

SPRAYIT SP351

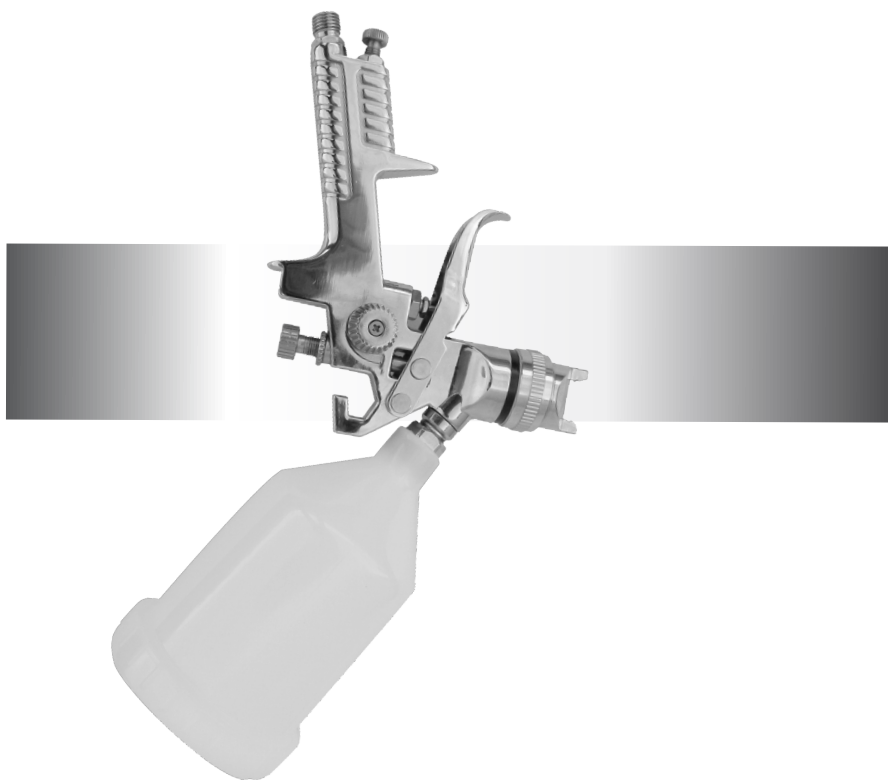

SPRAYIT

ESPAÑOL

1	Reglas de seguridad
2	Ensamble y características
3	Operación
4	Ajuste
5	Lista de Partes
6	Mantenimiento/Almacenaje/Problemas
7	Garantía

REGLAS DE SEGURIDAD

¡IMPORTANTE! Antes de comenzar a utilizar este equipo es necesario leer completamente este manual de instrucciones para poder operar bajo las mejores condiciones y así poder obtener el máximo de rendimiento. En este manual se incluyen instrucciones para operar y dar mantenimiento así como instrucciones de seguridad.

Se prohíbe el uso de este equipo por parte de menores de edad y personas no capacitadas para su uso. No intente utilizar este equipo en aplicaciones para las que no fue diseñado. El operarla bajo estas condiciones puede dañar permanentemente el equipo o provocar daños o lesiones.

Utilice siempre accesorios en buen estado y con las características que tiene el equipo, si algún accesorio presenta fallas en su funcionamiento reemplácelo enseguida. Es recomendable siempre en las conexiones entre dos elementos enredar cinta teflón o sellador para evitar las fugas de aire. No conecte mangueras demasiado largas se recomienda que no sean mayores a 5 mts.

Si trabaja con productos que para su acondicionamiento ocupen algún tipo de solvente, prepárese y trabaje en lugares abiertos y ventilados. La acumulación de gases puede llegar a provocar algún tipo de explosión. Se recomienda la utilización de mascarillas para evitar la inhalación excesiva de solventes o productos pulverizados.



INDEX

Safety Rules	1
Assembly and Specifications	2
Operation	3
Adjustment	4
Parts List	5
Maintenance/Storage/Troubleshooting	6
Warranty...	7

SAFETY RULES


!!IMPORTANT! Before you begin to use this equipment it's necessary to read this manual completely to be able to operate under the best conditions and thus for being able to obtain the maximum of yield. In this manual, instructions are included to operate and to give maintenance as well includes instructions of security.

Is prohibited the use of this equipment to minors and people nonenabled for its use. Don't try to use this equipment in applications for which it was not designed. Operating it under these conditions can damage the equipment permanently or cause damages or injuries.

Use always accessories in good state and with the characteristics the equipment has, if some accessory presents or displays malfunctions in its operation immediately replace it. Teflon or sealant are always recommended in connections between two elements to avoid air leaks. Do not connect too long of a hose , no longer than 15 ft. is recommended.


Gas accumulation can cause some type of explosion, work in open and ventilated areas. The use of a mask is recommended to avoid the excessive inhalation of pulverized products.



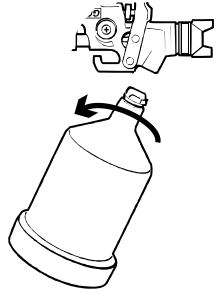

También necesitamos antes colocar el vaso en su posición. Únicamente se debe enroscar el vaso en el conector adecuado de la pistola.

Las conexiones son de 1/4", utilice mangueras del mismo tamaño. Conectamos el regulador que acompaña a la pistola en la entrada de aire tal y como se muestra en la imagen.

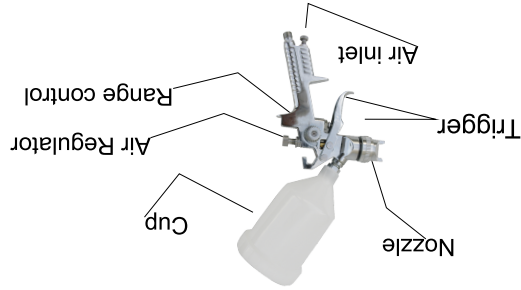

Este tipo de pistola está fabricada bajo estándares internacionales de calidad. Cuenta con tres controles: aire, material y abanico. Aunque el control de aire es un regulador externo que hay que colocar a la entrada de aire de la pistola. Sus principales partes son:

ENSAMBLE

Nunca opere el equipo si se encuentra bajo los efectos del alcohol o de alguna droga. Si tiene muestras de agotamiento suspenda el uso, puede provocar un accidente.

Para realizar cualquier tipo de labor de mantenimiento es necesario desconectar el equipo de la línea neumática. Si por alguna razón se requiere alguna pieza de la pistola recomendamos que la sustituya por una original nunca utilice piezas similares o de propia fabricación.




To perform any maintenance work it is necessary to disconnect the pneumatic line. If for any reason it is required to replace any pieces of gun we suggest you replace it with an original, never use similar parts or other manufacture.


Never operate equipment if you are under the influence of alcohol or any drug. If you show exhaustion suspend the use, it can cause an accident.

ASSEMBLY

This type of gun is fabricated under international standards of quality.

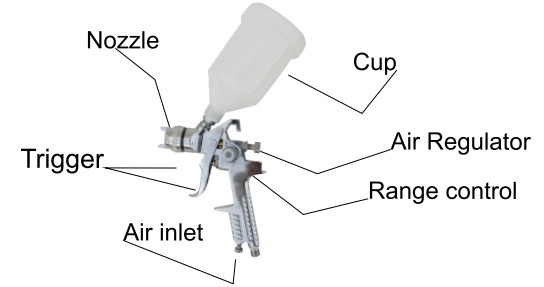


The connections are of 1/4", use hoses of the same size. The regulator that accompanies the gun needs to connect to air inlet of the gun.

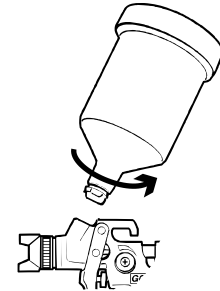

First put the cup in its position.

Antes de empezar a trabajar con la pistola HVP, asegúrese de contar con aire limpio de humedad y de partículas de aceite con el fin de evitar que se manche el trabajo.

Asegúrese de tener el compresor adecuado para el funcionamiento de la pistola (13 c.f.m.).

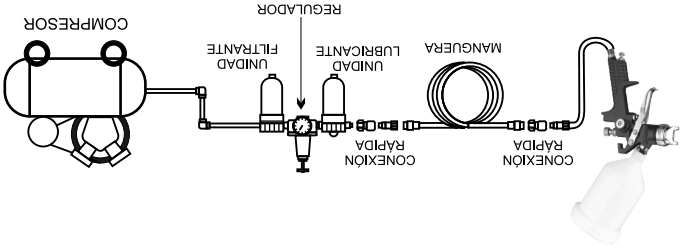


CARACTERÍSTICAS TÉCNICAS

Entrada de aire	1/4" (6.35 mm.)
Tamaño de la boquilla	0.05" (1.4 mm.)
Rango de presión	28.8-51 PSI (2-3.5 bar)
Presión máxima de aire	120 PSI (8.3 bar)
Capacidad del vaso	600 cc.
Consumo de aire	4.2 - 7.1 cfm (118-201 l/min)
Tamaño de abanico	5.9"-7.1" (150-180 mm.)
Peso	1.54 lbs (0.70 kgs)

OPERACIÓN

Para hacer funcionar la pistola, coloque el material en el vaso, procure siempre llenar el vaso cuando la pistola se encuentre desconectada de la línea de aire. Con el vaso lleno de material, conecte la pistola a la línea de acción el gatillo para que el material salga pulverizado, este tipo de pistolas tiene dos pasos; en el primero se permite la salida de aire y en el segundo sale aire y el material.

Before you start to work with the spray gun, be sure to have clean air and moisture particles of oil in order to prevent it from a stained work.

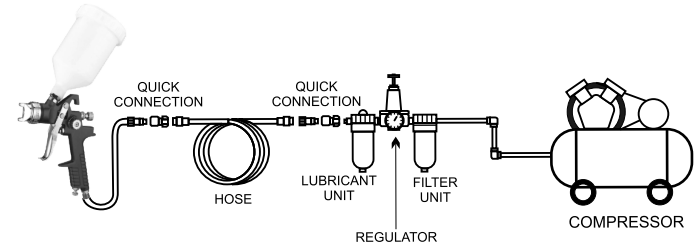

Air inlet	1/4" (6.35 mm.)
Nozzle size	0.05" (1.4 mm.)
Air pressure range	2-3.5 bar (28.8 - 51psi)
Max. pressure of air	8.3 bar (120psi)
Cup capacity	600cc plastic cup
Consumption	118-201 l/min (4.2 - 7.1cfm)
Pattern Width	150-180 mm. (5.9"-7.1")
Weight	0.70 kgs (1.54 lbs)

OPERATION

1. After unpacking the product, inspect carefully for any damage that may have occurred during transit. Make sure to tighten fittings, bolts, etc., before putting unit into service.
2. Thoroughly mix and thin paint in accordance with the paint manufacturer's instructions. Most materials will spray readily if thinned properly.

3. Strain material through filter, cheese cloth or a paint strainer.

4. Fill the canister about 3/4 full and start the air compressor.

WARNING DO NOT EXCEED Maximum Pressure of Spray Gun or any other parts in the compressor system.

5. After Connect the gun to air supply, please make sure that the fluid cap, container and air hose have been connected tightly with spray gun.

6. Set up a piece of cardboard or other scrap material to use as a target and adjust for best spray pattern.

WARNING Never aim or spray at yourself or anybody else which would cause serious injury.

7. Test the consistency of the material by making a few strokes on a cardboard target. If material still appears too thick, add a small amount of thinner. **THIN WITH CARE!**


Do not exceed paint manufacturer's thinning recommendations.

Ajuste


Para conseguir una buena pulverización del material necesitamos equilibrar la cantidad de aire y la cantidad de material. Para lo que nos ayudamos de los controles de material, aire y abanico.

Ajuste del volumen de aire. Utilice el tornillo del manómetro para ajustar la presión de aire con que alimentamos la pistola

Ajuste de anchura de abanico. Gire el control del abanico para ajustar el rango de anchura de rociado. El patrón de rociado puede ser alterado, de rociado plano a rociado redondo si se requiere.

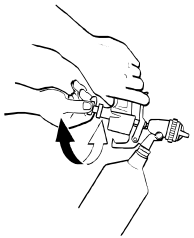


Ajuste de la cantidad de material. Gire el tornillo ubicado en la parte posterior hasta obtener la cantidad de pintura adecuada.

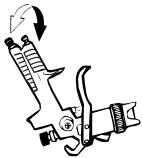

Este tipo de pistola tiene la característica de que podemos cambiarle la boquilla, tobera y aguja, esto con la finalidad de poder obtener un patrón uniforme con diferentes tipos de densidades de materiales. Cuando los materiales son más viscosos se recomienda utilizar juegos de refacciones con una mayor abertura. Por el contrario si tuvieramos viscosidades bajas con un juego de refacciones de una abertura pequeña se obtiene el efecto deseado.

Para lograr una correcta aplicación se debe mover la pistola de lado a lado teniendo presente que se haga en forma paralela a la superficie de aplicación. Como se ilustra en la siguiente figura.

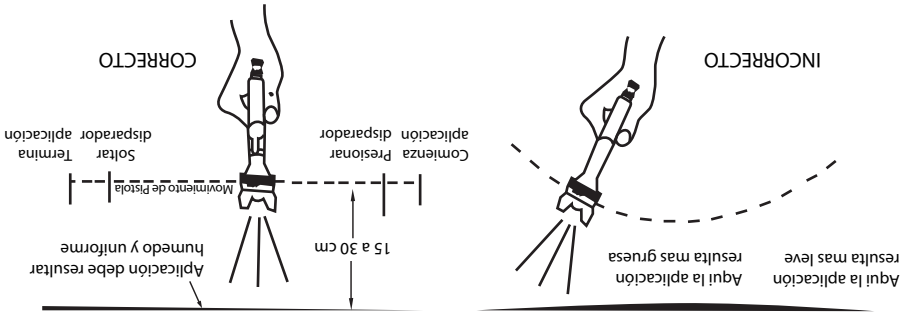


Adjustment

The desired pattern, volume of fluid output and fine atomization can easily be obtained by regulating the Pattern Adjusting Knob, Fluid (Paint) Adjusting Knob and Air Adjusting Knob.

AIR Volume ADJUSTMENT: Turning the Air Adjusting valve clockwise will decrease the air volume. And counter-clockwise will increase the air volume.



PATTERN ADJUSTMENT: Turning Pattern Adjusting Knob to the right until tight will make spray pattern round, or turning left make spray pattern ellipse.

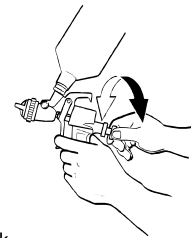


Fluid (Paint) ADJUSTMENT: Turn the Paint Adjusting Knob clockwise will decrease the volume of fluid output and conter-clockwise will increase fluid output.

Operation


1. Begin spraying. Always keep the gun at right angles to the work .
2. Keep the nozzle about 6 to 12 inches from the work surface. Grip the gun keeping perpendicular with spraying area then move it parallel for several times, Stopping gun movement in mid-stroke will cause a build up of paint and result in runs. Do not fan the gun from side to side while painting. This will cauze a build-up of paint in the center of the stroke and an insufficient coating at each end.
3. Trigger gun properly. Start the gun moving at the beginning of the stroke BEFORE SQUEEZING THE TRIGGER and release the trigger BEFORE STOPPING GUN MOVEMENT at the end of the stroke. This procedure will blend each stroke with the next without showing overlap or unevenness.
4. The amount of paint being applied can be varied by the speed of the stroke, distance from the surface and adjustment of the fluid control knob.
5. Overlap strokes just enough to obtain an even coat.

NOTE: Two thin coats of paint will yield better results and have less chance of runs than one heavy layer.

6. Use a piece of cardboard as a shield to catch overspray at the edges of the work to protect other surfaces.

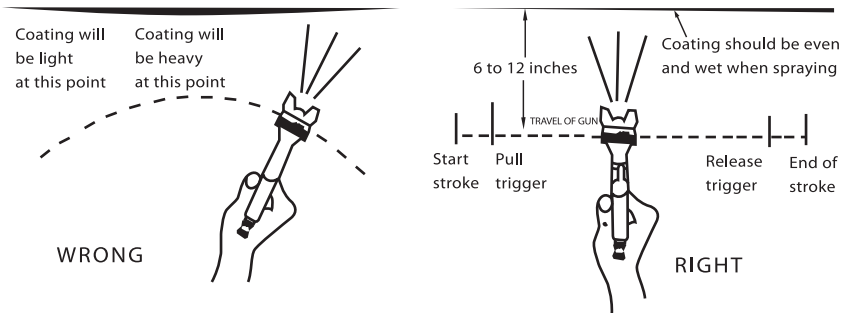


PARTS LIST

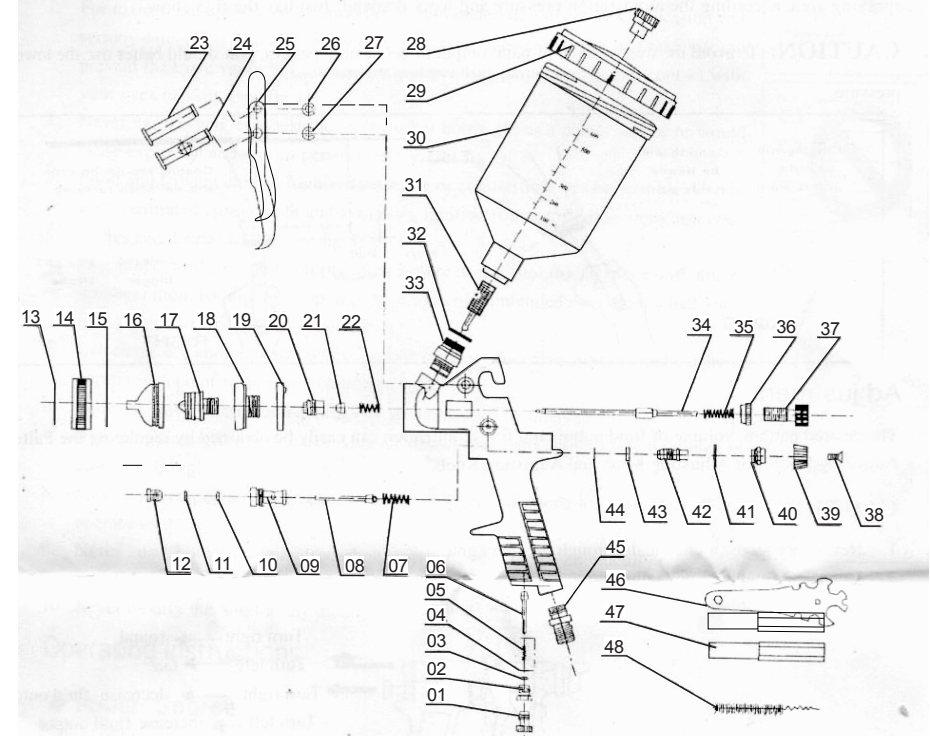

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	Air Adj. Screw	17	Fluid Nozzle	33	Fluid Inlet Joint
2	Air Adj. Knob	18	Fluid Nozzle Joint	34	Fluid Adj. Needle
3	O-ring	19	Joint Washer	35	Fluid Needle Spring
4	Washer	20	Direction Screw	36	Joint
5	Air Valve Spring	21	Paint Needle Washer	37	Fluid Adj. Knob
6	Air Inlet Valve	22	Locking Spring	38	Phillips Screw
7	Switch Spring	23	Trigger Level I	39	Pattern Adj.
8	Air Valve Body	24	Trigger Level II	40	Pattern Adj. Knob
9	Switch Knob	25	Trigger	41	Washer
10	O-ring	26	Snap Retainer	42	Pattern Adj. Screw
11	Pliable Washer	27	Snap Retainer	43	O-ring
12	Direction Screw	28	Ventilator Head	44	Snap Retainer
13	Spring	29	Cup Cover	45	Air Inlet Joint
14	Nut	30	Cup	46	Tool Wrench
15	Fluid Cap Washer	31	Filter	47	Hex. Wrench
16	Atomization	32	Fluid Inlet Joint Washer	48	Brush

5 LISTA DE PARTES

NO.	DESCRIPCIÓN	NO.	DESCRIPCIÓN	NO.	DESCRIPCIÓN
1	Tornillo Control de Aire	17	Boquilla de Fluido	33	Conector para Recipiente
2	Perilla Control de Aire	18	Boquilla de Conexión	34	Aguja Ajustador de Líquidos
3	Aro Sello	19	Arandela de Conexión	35	Resorte para Aguja
4	Arandela	20	Tornillo Regulador	36	Cierre para Perilla
5	Resorte de Valvula de Aire	21	Empaque para Aguja	37	Perilla Control de Líquidos
6	Pieza de Conexión de Aire	22	Resorte	38	Tornillo
7	Resorte para Cambios	23	Tornillo	39	Ajustador de Rociador
8	Valvula de Aire	24	Perno de de Gatillo	40	Perilla Ajustador de Rociador
9	Perilla de Cambios	25	Gatillo	41	Arandela
10	Aro Sello	26	Aro Sello	42	Tornillo Ajustador de Rociador
11	Arandela	27	Aro Sello	43	Aro Sello
12	Tornillo	28	Tornillo Ventilador	44	Aro Sello
13	Resorte	29	Cubierta	45	Pieza de Conexión de Aire
14	Tornillo	30	Vaso de Plastico	46	Llave
15	Arandela de Fluido	31	Filtro	47	Llave
16	Pulverizador	32	Arandela de Conexión	48	Cepillo

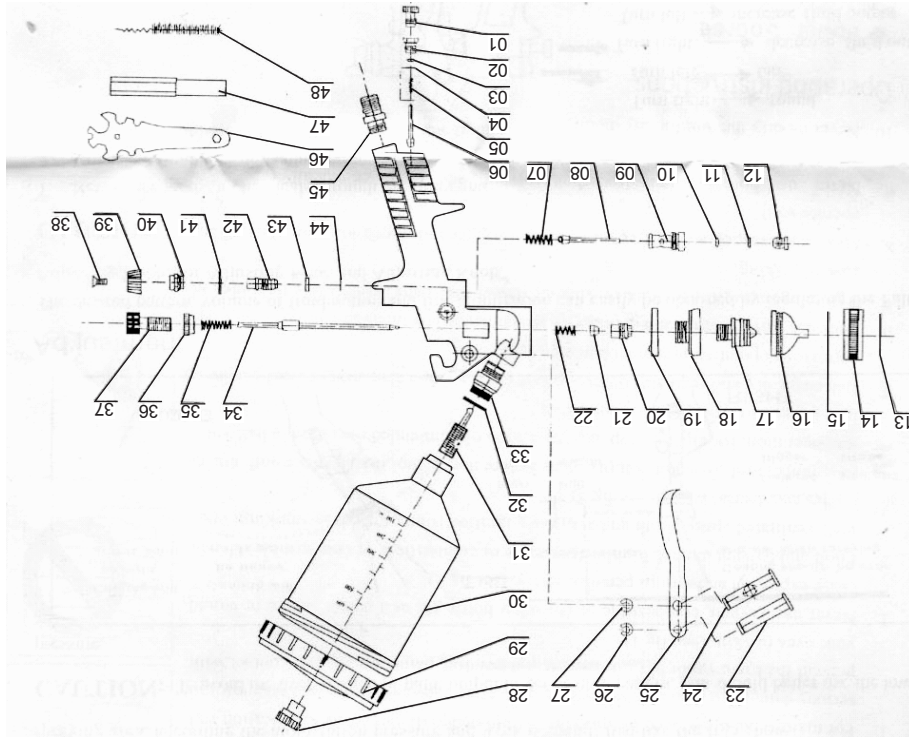

LISTA DE PARTES

5 PARTS LIST

Limpieza y cuidados de la pistola

A. Limpie la pistola y el vaso: ponga un poco de solvente en el vaso y accione el gatillo para que se limpie por dentro. Hágalo varias veces
B. Limpie la boquilla de aire con un cepillo. **Nunca sumerja la pistola en solvente.** Los orificios tapados nunca deben limpiarse con objetos duros puesto que el más mínimo daño puede influir negativamente en el patrón de rociado.
C. Los empaques deben ser ligeramente lubricados después de la limpieza de la pistola

TABLA DE PROBLEMAS

PROBLEMA	CAUSA	SOLUCIÓN
1. La pistola gotea por la boquilla	1. Objetos o sustancias extrañas entre la boquilla y la aguja que evitan que selle.	1. Limpie la boquilla y la aguja en solvente o utilice una nueva boquilla
2. Sale pintura por la aguja o por el sello de la aguja	2. El sello elastico de la aguja dañado	2. Cambie el sello de la aguja
3. Patrón de rociado en forma de hoz	3. Boquilla o respiraderos de la boquilla tapados.	3. Remoje la pieza en solvente, después limpie con una aguja para los orificios de la boquilla.
4. Patrón de rociado en forma de gota u ovalado	4. Suciedad en la aguja o en la salida de aire.	4. Gire la boquilla 180°. Si el patrón no cambia limpie la boquilla y la entrada de aire.
5. El rocío es irregular o palpita	5. Muy poca pintura en el vaso, boquilla mal apretada, sello de la aguja dañado, boquilla colocada con suciedad o	5. Ponga más pintura. Apriete las piezas fuere necesario limpie o cambie las piezas.

MAINTENANCE AND STORAGE

Cleaning and taking care of the gun

- A. Clean the gun and cup: put a little solvent in the cup and activate the trigger. Do it several times
B. Clean the nozzle with a brush. **Never immerse the gun in solvent.** The holes should never be cleaned with hard objects because the slightest damage may adversely affect the spray pattern.
C. Gaskets should be lightly lubricated after cleaning gun.

TROUBLESHOOTING TABLE

TROUBLE	CAUSE	SOLUTION
1. The paint dripping by the gun nozzle	1. Objects or foreign substances between the nozzle and the needle that prevent seal.	1. Clean the nozzle and the needle in solvent or use a new mozzle.
2. Paint leaves by the needle or by the seal of the needle	2. The resilient seal of the damaged needle.	2. Change the seal of the needle.
3. The paintspray the form of sickle	3. Nozzle or vents are stuck.	3. Soak the piece in solvent, then wipe with a needle the nozzle orifices.
4. The paint spray as a drop or oval shape	4. Dirt in the needle or in the air outlet.	4. Turn the nozzle 180°. If the skipper spray doesn't change clean the nozzle and the air outlet.
5. The dew is irregular or beats	5. Very little paint on the cup, nozzle bad tight, the needle seal damaged nozzle placed with dirt or damaged.	5. Put more paint. Tighten the pieces correctly. If it's necessary clean or change the pieces.

GARANTÍA

PÓLIZA DE GARANTÍA

El período de garantía comienza a contar a partir de la fecha con que fue facturada al usuario final.

Esta garantía no cubre casos en uso comercial del producto, o casos en uso de arrendamiento del producto (uso personal por parte de un cliente): 1 año de garantía en partes.

CONDICIONES:

Para hacer efectiva esta garantía se deberá acudir exclusivamente a cualquier de los Centros de Servicio Autorizados y no se exigirán mayores requisitos que la presentación de la presente póliza de garantía donde se mencionen claramente el modelo, número de serie, fecha de compra, en cuyo documento conste el sello del establecimiento que vendió el producto con los datos que en la misma aparecen, comprobante de compra, llevándolo junto con el producto cuya garantía se exige, ante cualquier centro de servicio, según lo indica la presente póliza de garantía.

LIMITACIONES:

En la medida permitida por la ley aplicable esta garantía limitada cubre exclusivamente aquellas partes, equipos o subensamblajes que hayan sido instalados de fábrica y no incluirá en ningún caso equipo adicional que se haya instalado como unidades de mantenimiento, derivaciones, reductores, llaves de paso etc. Esta garantía no incluye accesorios tales como empaques, o rings, juntas, bandajas y otros que por el uso se agoten o se gasten. Lo anterior, salvo el caso que los mismos presentes defectos de fabricación y/o mano de obra.

Esta garantía se anula en los siguientes casos:

1. Cuando la falla o avería se deba a la omisión de las instrucciones contenidas en el instructivo por parte del usuario.
2. Cuando la falla sea provocada por la reparación de personal no autorizado
3. Cuando el producto ha sido utilizado en condiciones diferentes a las Especificadas en el instructivo.

SEÑOR DISTRIBUIDOR:

FAVOR DE LLENAR LOS ESPACIOS CON LA INFORMACIÓN REQUERIDA:

PRODUCTO: _____

MODELO: _____

NUM. DE SERIE: _____

FECHA DE COMPRA: _____

NUM. DE FACTURA: _____

SELLO DE LA CASA VENDEDORA

GARANTÍA

7

This warranty is limited to the SPRAYIT distributed by
California Air Tools Inc.
8560 Siempre Viva Road Unit 3A
San Diego California 92154

WARRANTY

WARRANTY POLICY

The limited warranty period begins on the date of retail purchase by the original purchaser:

Limited Warranty

California Air Tools Inc. Will repair or replace, free of charge, to the original retail customer who purchased SPRAYIT from an authorized dealer distributor or distributor's dealer. This warranty does not transfer to subsequent owners.

California Air Tools Inc. will repair or replace, at its option, any parts that are proven by an authorized service center to be defective in material or workmanship under normal use during the applicable warranty time period as stated below. This limited warranty covers the cost of the replacement parts and labor for all defects when installed by authorized service center. Transportation charges are the responsibility of the customer. Any part replaced under warranty becomes the property of California Air Tools Inc.

All parts replaced under warranty will be considered as part of original product, and any warranty on those parts will expire coincident with the original product warranty.

Limited Warranty Period

Non-commercial / Non-rental (personal use by a retail customer): 1 year parts

Disclaimers and Limitations of Remedies

This warranty gives you specific legal right, and you may also have other rights which may vary from State to State.

Disclaimer of other Warranties

To the fullest extent permitted by applicable law, this limited warranty is exclusive and expressly in lieu of any and all other warranties, including, without limitation, any implied warranties of merchantability or fitness for a particular purpose or any other implied warranties that may arise from the course of dealing or usage of the trade. California Air Tools Inc. hereby disclaims and excludes all other warranties.

To the extent that California Air Tools Inc. products are consumer products under applicable federal and state law with respect to any customer, the duration of any implied warranties (including, but not limited to implied warranties of merchantability or fitness for a particular purpose) are limited to the shortest duration permitted by applicable law or the Limited Warranty period provided herein, whichever is longer.

Limitations of Remedies

California Air Tools Inc. shall not be liable to customer, or anyone claiming under customer, for any other obligations or liabilities, including, but not limited to, obligations or liabilities arising out of breach of contract or warranty, negligence or other tort or any theory of strict liability, with respect to the spray gun or California Air Tools Inc. acts or omissions or otherwise. To the fullest extent permitted by applicable law California Air Tools Inc. shall not in any event be liable for incidental, compensatory, punitive, consequential, indirect, special or other damages, including but not limited to loss of use, loss of income, loss of time, loss of sales, injury to personal property, or liability customer incurs with respect to any other person, or any other type or form of consequential damage or economic loss.

DISTRIBUTOR:

PLEASE FILL THE LINES WITH THE REQUIRED INFORMATION:

PRODUCT: _____ MODEL: _____

SERIAL NUMBER: _____

DATE OF PURCHASE: _____ INVOICE NUMBER: _____

STAMP OF THE SALE ESTABLISHMENT:

7

WARRANTY